

SESAME™ SAMPLING VALVE

User Manual



DOCUMENT VERSION LOG

The table below lists previous versions of this User Manual and states the major changes between versions.

Version #	Version date	Major changes from previous versions
1	September 2016	This is the first version of the SESAME manual
2	October 2016	Ambient temp. changed in 6.4. Added pressure graphs in 6.7. Spare parts list in 13.1. 15.2 and 15.4 deleted as not applicable.
3	February 2017	Steel plugs added in 6.3. Chapter 7 Valve Bodies added. Chapter 8 Valve Heads added. Chapter 9 Parts & Accessories added.
4	September 2017	More detailed certificate specifications. Expanded temperature ranges. Modified drawings for Clamp and Varivent connections. Failure Mode section added to Maintenance chapter. Chapter 14 integrated in chapter 13. Missing drawings/illustrations added.

INTRODUCTION:

MANUFACTURER: Keofitt A/S
Kullinggade 31
5700 Svendborg, Denmark

TYPE: SESAME™ SAMPLING VALVE

PATENTS: DK 175721 B1. CN 100501219C.
EP 1. 690 038 B1. US 7,658,201 B2

YEAR OF INTRODUCTION: 2016

MANUAL LAST UPDATED: September 2017

The English version of this Manual is the governing version and it is the only authorized version. Consequently, KEOFITT cannot be held liable for other versions including translations of this Manual.

CONTENTS

1. PRESENTATION	7
1.1 Definition of terms	7
1.2 Quick start	9
2. CLEANING – DISINFECTION – STERILISATION	10
2.1 Clean-In-Place (CIP)	10
2.2 Disinfection	10
2.3 Sterilisation	11
3. VALVE DESIGN AND FUNCTIONING	12
3.1 Valve body configurations	12
3.2 Valve surfaces and roughness certificate	12
3.3 Valve head configurations	13
3.4 Rubber caps and steel caps	13
3.5 Sampling coil	13
3.6 Membranes	14
3.7 Parts and Accessories	15
3.8 Pressure and vacuum	15
3.9 Valve cleaning /disinfection /sterilisation	16
4. EVERYDAY USE OF THE VALVE	17
4.1 Batch change cleaning	17
4.2 Chemical cleaning, CIP	17
4.3 Chemical Disinfection	18
4.4 Steam sterilisation	18
5. VALVE OPERATIONS	19
5.1 Chemical CIP	19
5.2 Chemical disinfection	20
5.3 Steam sterilisation	22
5.4 Sampling	24
6. TECHNICAL DATA.....	25
6.1 Material	25
6.2 Certificate	25
6.3 Pressure (max.)	25
6.4 Temperature	25
6.5 Surface finish	26
6.6 Viscosity:	26
6.7 Flow	26
7. VALVE BODIES	28
8. VALVE HEADS.....	29
9. PARTS & ACCESSORIES.....	30
10.MOUNTING INSTRUCTIONS.....	31
10.1 Location.....	31
10.2 Before welding	31

11. WELDING INSTRUCTIONS.....	32
11.1 Welding method.....	32
11.2 Guideline welding values	32
12. BLOCK DIAGRAMS.....	33
12.1 Keofitt valve type T (tank)	33
12.2 Keofitt valve type P (pipe)	33
12.3 Keofitt valve type clamp connection	34
12.4 Keofitt valve type Varivent®.....	34
13. MAINTENANCE	35
13.1 Maintainance.....	35
13.2 Spare parts list	35
13.3 Disassembly and assembly of valve body and head.....	36
13.4 Replacing a rubber membrane	36
13.5 Instructions on replacing a PTFE membrane	37
13.6 Cleaning valve head	38
14. FAILURE MODES	39
14.1 Broken membrane tip:.....	39
14.2 Broken membrane side:.....	39
14.3 Broken integrated o-ring:	39
14.4 Cleaning the valve after a failure:.....	39
15. MEMBRANES.....	40
15.1 Silicone membrane - art. no. 890051	40
15.2 EPDM membrane - art. no. 890052.....	41
15.3 PTFE membrane - art. no. 890055.....	42

1. PRESENTATION

The Keofitt SESAME sampling valve is an enhancement of the renowned classic W9 sampling valve taking representative and uncompromised sampling to new heights.

SESAME is a dual function valve individually controlling both the cleaning (steaming or liquid detergent/disinfectant) process and the sampling action through a single turn knob. In case of steaming steam supply may be permanently connected and there is no need for a separate steam valve.

From the operator's point of view SESAME offers an easy and failure-proof handling both when cleaning/steaming and for sampling.

As with the W9 valve effective cleaning and disinfection/sterilisation of the sampling valve can be carried out between random samples independently of the course of the production process without compromising the same. The coaxial design and the electro polished valve interior ensure absolute cleanability.

Keofitt valves are used in a wide range of processing industries, such as breweries, dairies, juice/soft drinks and the biotechnological and pharmaceutical industries.

1.1 Definition of terms

In order to ease the reading of this manual and to avoid any misunderstanding, please refer to the definition of terms in the table below:

TERM	DEFINITION
3-A Sanitary Standard	3-A SSI is an independent, not-for-profit US corporation dedicated to advancing hygienic equipment design for the food, beverage and pharmaceutical industries.
Acids	An acid is a chemical substance whose aqueous solutions are characterized by a sour taste and the ability to react with bases and certain metals (like calcium) to form salts. Aqueous solutions of acids have a pH of less than 7. A lower pH means a higher acidity, and thus a higher concentration of positive hydrogen ions in the solution. Removes limestone and most mineral deposits.
Alkali	Alkalis are all bases, which form hydroxide ions (OH-) when dissolved in water. The terms "base" and "alkali" are often used interchangeably. Alkalis have a pH value above 7. Alkalis dissolves fat and oil, destroys protein and attacks light metal.
Aseptic sampling	The process of withdrawing a sample from the production equipment through a closed circuit, which has been sterilised and kept sterile with no exposure to the ambient during the sampling process.
Bioload	See Microbial load.
Bioburden	See Microbial load.
Chemical Sterilant	A few disinfectants will kill spores with prolonged exposure times (3–12 hours); these are called chemical sterilants.
Chlorine	Chlorine is a chemical element with symbol Cl and atomic number 17. It belongs to the halogen group together with for instance iodine. It is a strong oxidizing agent and reacts with many substances. These properties make chlorine compounds efficient disinfectants.
CIP	Abbreviation of Clean-In-Place. The process of cleaning a process component (like a sampling valve) without removing it from the production line.
Cleaning	Removal, usually with detergent and water or enzyme cleaner and water, of adherent visible soil on a surface.

Complexing agent	A substance capable of forming a complex compound with another material in solution. Improves the cleaning properties of a detergent.
Contact time	The time span during which the item is in contact with the detergent or the disinfectant.
Enzymes	Molecules, which are added to cleaning agents to ease the removal of specific organic material. Assures same cleaning effect at a lower temperature.
Disinfectant	Usually a chemical agent that destroys harmful microorganisms but might not kill bacterial spores.
Disinfection	Thermal or chemical destruction of microorganisms. Disinfection is less lethal than sterilisation, because it destroys most recognised microorganisms but not necessarily all microbial forms (e.g. bacterial spores).
Detergent	A cleaning agent that has no antimicrobial effect, but in diluted solutions good cleaning properties.
EHEDG	Abbreviation for the European Hygiene Engineering and Design Group. EHEDG is a consortium of equipment manufacturers, food industries, research institutes as well as public health authorities promoting safe food by improving hygienic engineering and design in all aspects of food manufacture.
Electro polishing	Electro polishing is an electrochemical process by which the high points within the microscopic surface texture are removed and the corners rounded. This results in Reduced Product Adhesion, Ease of Cleaning and Improved Corrosion Resistance.
Exposure time	Period in a sterilisation/disinfection process during which the item is exposed to the sterilant/disinfectant at the specific sterilisation/disinfection parameters.
Flow path	The path the sample flows from the tank or process equipment to the sample recipient.
Germicidal	The property of an agent to destroy microorganisms.
Microbial load	The number and types of viable microorganisms with which an item is contaminated; also called bioload or bioburden.
Microorganisms	Animals or plants of microscopic size. As used in food and pharmaceutical industries, generally refers to bacteria, fungi, viruses and bacterial spores.
Peracetic acid	A commonly used disinfectant, which is efficient at low temperature and short contact time. Relatively harmless as it decomposes into carbon dioxide (CO ₂) and water (H ₂ O).
Process media	The product in the process equipment and the product from which a sample is taken.
Representative sample	A sample which when it reaches the laboratory is still identical to the process media. A sample which is in no way contaminated or altered during neither the sampling process nor the transport to the laboratory.
Sanitization	The application of a chemical agent that reduces the number of bacterial contaminants to a safe level as judged by the public health authorities. The official sanitizer protocol indicates that 99.999% of the specific test bacteria be killed in 30 seconds under the conditions of the test.
SIP	Abbreviation for Sterilise-In-Place. The process of rendering a process component (like a sampling valve) sterile without removing it from the production line.

Spores	Relatively water-poor resting cells surrounded by an impervious cell wall, which makes them relatively resistant to disinfectants and sterilants. They are dangerous as they can survive in adverse conditions and re-emerge as live bacteria at a later stage.
Sporicidal	The property of an agent that kills spores.
Steaming	The process of using saturated steam under pressure as the sterilising agent.
Sterile	State of being free from all living microorganisms. In practice, usually described as a probability function, e.g., as the probability of any microorganism surviving sterilisation being one in one million.
Sterilant	A few disinfectants will kill spores with prolonged exposure times (3–12 hours); these are called chemical sterilants.
Sterilisation	Validated process used to render an item free of all forms of viable microorganisms. In a sterilisation process, the presence of microorganisms is expressed in terms of probability. Although this probability can be reduced to a very low number, it can never be reduced to zero.
Sterility Assurance Level	The probability of a viable microorganism being present on an item after sterilisation. Usually expressed as 10^{-n} ; a SAL of 10^{-6} means <1/1 million chance that a single viable microorganism is present on a sterilised item.
Tensides	A tenside is a surfactant that reduces the surface tension of water and assures a faster and better contact between the detergent and the soil.

1.2 Quick start

The table below gives you an overview of the relevant chapters to read depending on the operations you want to perform to obtain the required hygienic level.

Required hygienic level	4.1 Pre-production treatment	4.2 Chemical cleaning CIP	4.3 Chemical disinfection	4.4 Steaming	5.1 Chemical CIP	5.2 Chemical disinfection	5.3 Steam sterilisation	5.4 Sampling
Cleaning	✓	✓			✓			✓
Disinfection	✓		✓			✓		✓
Sterilisation	✓			✓			✓	✓

2. CLEANING – DISINFECTION – STERILISATION

2.1 Clean-In-Place (CIP)

Thorough cleaning of the valve is a prerequisite for proper disinfection or sterilisation. Cleaning of the valve is the removal of any visible residual product, it be organic or inorganic. It may be done using either steam (continuous steam will eventually lead to sterility; SIP = Sterilise-In-Place) or a suitable liquid detergent.

Cleaning is the removal of adhering soil from the environment and from the previous sample (to the extent it has not been removed by the recommended post-sample cleaning). Cleaning is usually performed by flushing with water followed by a thorough washing with an appropriate detergent and finished off with a thorough rinsing with water.

Depending on the actual process media the proper detergent must be determined in cooperation with your usual supplier of detergents. The company Novadan ApS, Kolding, Denmark - www.novadan.dk, has supplied the generic table below for your convenience.

What to clean for	Generic cleaning agents	Comments
Fat	Alkali and Tensides	Heat will facilitate the cleaning process as the fat melts
Protein	Alkali, Acids, Tensides and Chlorine	Coagulation and burning when heated, which makes the product hard to remove.
Sugar, Salt	Water is usually sufficient as the product is water soluble	Sugar caramelises when heated, turning into a hard sticky substance, which is difficult to remove
Minerals	Acids, Complexing agent	Often seen as lime scale
Biofilm	Alkali and Chlorine, Peracetic acid, possibly Enzymes	Biofilm is an accumulated mass of microorganisms that is tightly adhered to a surface and cannot be easily removed.
Starch	Alkali and Chlorine	

2.2 Disinfection

Although CIP removes all visible residues of the process media the valve surfaces will still be contaminated on a microscopic level. Depending on your actual process media it will be necessary to carry out a disinfection operation in order to a) reduce the microbial load to an acceptable level (also referred to as Sanitization) or b) destroy critical microorganisms, but not necessarily all microbial forms (e.g. bacterial spores).

The disinfection process may be carried out in one of two ways and to different levels of disinfection depending on a) the initial microbial load distribution, b) the required hygienic level and c) the type, exposure time and concentration of the chemicals used (if using a chemical disinfectant):

- By steaming (in a continued process after steam cleaning)
- By applying one or more suitable liquid chemical disinfectants

There are a number of chemical disinfectants. It is important to choose the right one, the right concentration and contact time and the right method for your current application. Your usual supplier of chemical disinfectants can support you in choosing the right disinfectant for your process media and the specific group of microorganisms you are aiming at.

The company Novadan ApS, Kolding, Denmark has supplied the table below, as a preliminary indication of which type of disinfectant to use:

Disinfectant	Halogenes (Clorine)	Peroxides (hydrogenperoxid & peracetic acid)	Alcohol (70%)
Microbes to inactivate			
Gram-neg bacteria Salmonella Campylobacter E. Coli and others...			
Gram-pos bacteria Listeria Bacillus cereus Clostridium and others...			
Bacteria spores Bacillus cereus and others...			
Bacteriophage			
Yeast			
Fungi			
Virus			

Legend:

Efficient	Limited effect	Little/No effect
-----------	----------------	------------------

NOTE! The final choice of detergent, disinfectant and method lies with the user, supported by the supplier of the CIP fluids and disinfectants, as it is very much dependant on individual concerns and circumstances.

2.3 Sterilisation

Sterilisation is a high-level disinfection designed to render the valve free of all forms of viable microorganisms (incl. bacterial spores) to a high level of certainty; the so-called Sterility Assurance Level or SAL. A SAL value of 10^{-6} means that the probability (or risk) of a single viable microorganism being present on the valve interior afterwards is only 1 in 1,000,000 which is a generally accepted level for calling an item sterile. Although the probability can be reduced to a very low number, it can never be reduced to zero.

Sterility may in practise only be obtained by steaming. Disinfectants exist that in high concentrations and for a prolonged exposure time will be able to inactivate all forms of microorganisms and render the valve interior sterile with a high probability; these disinfectants are called chemical sterilants. However, the application of chemical sterilants is most often problematic due to a) a required high concentration, which causes an operator hazard and b) the several hours of exposure time.

NOTE! Furthermore, sterilisation with a chemical sterilant may not convey the same sterility assurance as sterilisation with steam, because the germicidal and sporicidal kinetics are much less investigated and documented for chemical sterilants compared to steam.

3. VALVE DESIGN AND FUNCTIONING

The valve is designed to regularly take representative samples in the production process. The valve is therefore designed such that effective cleaning, disinfection/sterilisation and sampling can be carried out regularly without interrupting the production process.

NOTE! The membrane has a tripple function: it serves as a dynamic seal towards the process side, it acts as a dynamic seal to activate cleaning/steaming and it constitutes a hygienic static sealing against the valve head.

3.1 Valve body configurations

Valve bodies may be welded to the process equipment or connected by means of one of the standard connector systems.

Welding configurations encompass the following options:

- Tank welding, $\varnothing 38$ mm
- Pipe welding, 25 mm

Connector configurations encompass the following options:

- Varivent, $\varnothing 50$ mm
- Varivent, $\varnothing 68$ mm
- Mini Clamp
- Clamp 1"
- Clamp 2"
- Union, DIN 11851

The inlet and outlet ports are available in the following configurations:

- Hose Piece (Keofitt Quick Coupling)
- Mini Tri-clamp
- Thread M16x1.5
- Welding ends (to weld steel tubing on)

All welding/connector options are available with Hose Piece ports. For the other port configurations only some combinations are standard; but all non-standard combinations are likely to be available "On request".

All valve bodies with their various ports are machined in one piece of steel, thus avoiding all crevices and fissures from screwed or welded parts.

For further information please consult www.keofitt.dk.

3.2 Valve surfaces and roughness certificate

All Keofitt valves are electro polished internally using a proprietary technique and each valve has its individual certificate (Test Report) stating the results of 3 test measurements of the surface roughness in each of the 2 ports, in the valve chamber and on the outer body surface with product contact.

For obvious reasons, the surface properties of the internal product contact areas of a sampling valve are much more important from a hygiene perspective than any shiny outside surface appearance. Therefore, Keofitt has developed a unique electrode configuration to assure during manufacturing that the internal surfaces in particular are properly electro polished.

3.3 Valve head configurations

Valve heads come in the following configurations:

- Turn knob (type H)
- Lever handle (type Q)
- Pneumatic (type N)

All configurations may be delivered with PTFE, EPDM or Silicone membranes.

3.4 Rubber caps and steel caps

The purpose of the cap is to protect the valve chamber from the environment between sampling.

Steel caps (part no. 800061) may be used instead of rubber caps and will provide a stronger mechanical fixation to the hose piece and thus be operational under higher pressure and temperature. Furthermore, the steel plugs may be autoclaved.

For further information please consult www.keofitt.dk.

3.5 Sampling coil

When sampling beer, the rapid pressure drop from inside the tank (CO₂ pressure of 2-3 bar) to the open pressure less sample recipient causes excessive foaming, even when opening the valve very slowly and very little. This phenomenon may be alleviated connecting a sampling coil (part no. 800058) between the sampling valve and the sample recipient. A sampling coil provides a slower pressure drop as the sample flows through the full length of the coil, approx. 1 m.

For further information please consult www.keofitt.dk.

3.6 Membranes

All valve head may be delivered with any of the 3 materials: Silicone, EPDM and PTFE. For FFKM please contact your local dealer or Keofitt.

They all have different properties and different resistance to various chemical substances, as seen in the table below.

Resistance to -	EPDM	Silicone	PTFE (Teflon)	FFKM
- weather and Ozone	✓✓✓	✓✓✓	✓✓✓	✓✓✓
- hydrolysis (water and steam)	✓✓✓	✓✓	✓✓✓	✓✓✓
- to acids and bases	✓✓	✓	✓✓✓	✓✓✓
- mineral oil and gas	✗	✓	✓✓✓	✓✓✓
✗=not suitable ✓=less suitable ✓=Suitable ✓✓=Very Good ✓✓✓=Excellent				

Put in words the properties can also be described like this:

- The Silicone membrane has the advantage that it in general can withstand high temperatures, but it cannot tolerate moisture condensation resulting from steam sterilisation
- The EPDM membrane is better able to cope with the condensation in the steam and at the same time it can be used with a majority of CIP fluids and disinfectants in normal concentrations
- The PTFE membrane resists all CIP fluids and disinfectants except highly oxidising acids in high concentrations
- The FFKM covers the highest temperature range and has excellent chemical resistance to virtually any chemical compound

Membranes in rubber materials like EPDM, Silicone and FFKM are fully interchangeable. This means that you may change from for instance Silicone to EPDM, if required.

However, valve heads with PTFE membranes are designed differently from the others. As PTFE is a stiff material with no elastic properties, it cannot be stretched. Therefore, it is made with a bellow to allow for the valve movement.

NOTE! The membrane functions as a dynamic seal in the valve seat and the CIP/steam seat, as well as a hygienic static sealing against the valve head.

3.7 Parts and Accessories

Keofitt provide a huge number of spare parts and accessories to the SESAME valves.

These include accessories like:

- Barbed fittings and tube welding fittings for tubes and hoses
- Adaptors between Tri-clamp, Mini Tri-clamp and Hose Piece (Quick Coupling)
- Spike Bag holders and Spikes
- Fitted PTFE tubing for Quick Coupling and Tri-clamp
- Any length of PTFE tube
- Clamps for Tri-clamp connections
- Hypodermic needles

and spare parts like:

- O-rings and gaskets
- Membranes

3.8 Pressure and vacuum

Pressure ratings:

All SESAME valves feature a spring to provide the closing force against the valve seat. The spring is dimensioned such that all valves must pass a pressure test up to 10 bar. At some tank pressure above 10 bar the spring will give way and the valve will leak.

A nominal max. constant pressure of 6 bar allow sufficient tolerance to cater for the most common pressure peaks in a process line.

Vacuum ratings:

On installations where vacuum will occur, rubber membranes (EPDM, FFKM, Silicone) are at risk of being sucked hard into the valve seat, whereby the valve might not open properly. However, the additional (closing) force from the vacuum (corresponding to max. -1 bar(g) or 0 bar(abs)) is rather small (10%) compared the force exerted by the spring (corresponding to at least 10 bar(g)), so there is no risk of damaging the membrane as long as the vacuum is only present when the valve is closed.

Besides, attempting to open a sampling valve under vacuum makes no sense, since nothing will flow out, so the incident is rather improbable.

Rubber membranes will seal perfectly well against vacuum, when the valve is kept closed.



WARNING:

- When opening the valve while the process side is under vacuum there is a risk that the membrane may be sucked passed the valve seat and into the valve opening, which could cause the membrane to be damaged.
- On installations where vacuum will occur, PTFE membranes don't have the risk of being sucked into the valve seat, but as it is a harder and less flexible material a complete tightness against the ambient air may not be secured.

3.9 Valve cleaning /disinfection /sterilisation

The table below describes the two fundamentally different ways of preparing the valve for sampling, 1) Chemical cleaning/disinfection and 2) Steaming:

	Method	Description	Pros & Cons
Chemical	Chemical cleaning	Liquid detergents are used to clean the valve. CIP = Clean-In-Place	This process is adopted where steam is not available or where the product cannot withstand the exposure to heat. Involves several stages with flushing, cleaning and rinsing between batches.
	Chemical disinfection	A disinfection process using an appropriate chemical liquid disinfectant usually follows the cleaning process. The valve interior is wetted, soaked or flushed with an appropriate disinfectant.	It adds 2 more stages to the CIP: application of disinfectant and final rinse. Involves handling of potentially hazardous chemicals.
Thermal	Sterilisation	Steam is supplied for 1 minute just before and immediately after sampling.	Steaming does flushing, cleaning, rinsing and sterilisation in one operation. Steaming is not suitable with heat sensitive products. Steaming entails the risk of burns.

Flushing with water followed by the supply of a chemical detergent through the inlet port, while in “Clean” position, results in cleaning the valve (CIP). It is the perfect, hygienic design and surface finish of the inner part of the valve, which enables easy, efficient and reliable cleaning in a closed state of the valve.

Supplying steam at the steam INLET port and setting the valve at “Clean” results in cleaning and sterilisation. It is the perfect, hygienic design and surface finish of the inner part of the valve, which enables sterilisation in a closed state. According to an EHEDG based test conducted by the Biotechnological Institute in Denmark, the valve is sterile after just 1 minute’s supply of steam at a pressure of 1 bar(g), 121 °C. Steaming is therefore a SIP process (Sterilise-In-Place)



WARNING

- During sterilisation with steam the valve will become hot and care should thus be taken when operating the valve
- The valve is designed for use in working conditions of up to 6 bar(g) pressure and temperatures of up to 121 C. It is therefore important to be aware that the rubber plug (designed for max. 3 bar(g)) or the steel plug (designed for max. 10 bar(g)) may be forced out at high speed, if not seated properly
- When steaming always use dry saturated steam at 1 bar(g). At higher pressure the membrane may be damaged/split
- Always remember to use safety goggles when steaming, CIPping, taking samples and all other operations of the sampling valve




4. EVERYDAY USE OF THE VALVE

This chapter gives an introduction to how the sampling valve works in different operating conditions. conditions, such as the cleaning of the entire production line before starting a new batch (chapter 4.1) and the cleaning of the valve between each sample during the batch production (chapters 4.2-4.4) For specific operator instructions please refer to the chapter “VALVE OPERATIONS”.

4.1 Batch change cleaning

Before every new production batch the sampling valve is cleaned and disinfected/sterilised together with the tank or vessel or the entire production line.

There are 3 different ways to perform the cleaning between batches as explained in the table below:
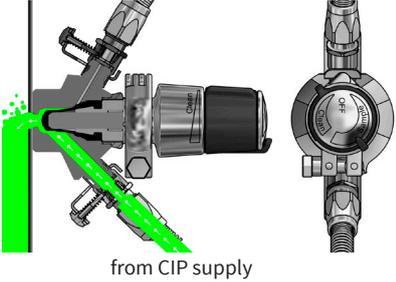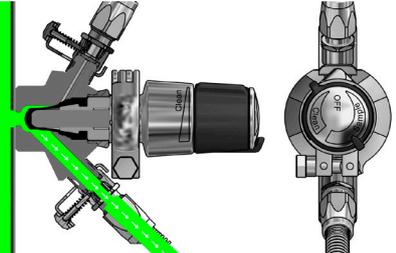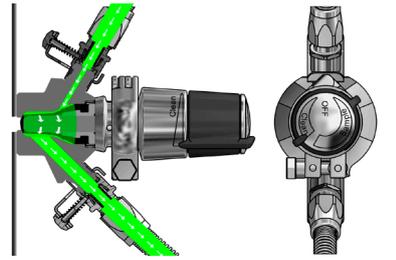
<p>TANK</p>	 <p>from CIP supply</p>	<p>Tank mounted: This cleaning method is suitable where the tank is spray cleaned between batches and a proper CIP flow through the valve cannot be assured from inside the tank. Set the valve in “Sample” position and connect a hose from the CIP supply to the outlet port. In this way the CIP liquid will flow through the outlet port and into the tank and clean the valve chamber and the valve seat. The valve body end surface will be spray cleaned together with the tank interior.</p>
<p>PIPE</p>	 <p>to CIP return pipe</p>	<p>Pipe mounted: This cleaning method is suitable if the valve is connected to a pipe with sufficient pressure to cause an adequate flow through the valve. Set the valve in “Sample” position and connect a hose from the outlet port to a CIP return pipe.</p>
<p>CIP</p>	 <p>from CIP supply to CIP return pipe</p>	<p>Through CIP port: This operation is normally not necessary, as this cleaning procedure will be executed before and after each sampling. Nevertheless, if cleaning through the CIP port is requested for the batch change cleaning the valve must at some time during the CIP cycle be set in its “Clean” position and hoses to and from the CIP supply connected as shown in the illustration.</p>

Remember to close the valve after the final rinse and prior to starting up the next production batch.

4.2 Chemical cleaning, CIP

During production and prior to sampling, cleaning takes place with the valve closed and involves the following stages:

1. **Pre-rinse**
Flushing with water to mechanically remove product residues
2. **Clean**
Applying a detergent to remove remaining visible product residues
3. **Final rinse**
Rinse with clean water to remove all traces of detergents

Usually this procedure is followed by disinfection (see below), but for some application CIP might be sufficient. It depends on your (microbiological) requirements, the detergents applied and the process media to clean for. Consult your supplier of CIP fluids.

In some cases where the process media is for instance water, CIP might not even be necessary and you may go directly to disinfection.

4.3 Chemical Disinfection

Disinfection takes place with the valve closed and involves the following stages of which the first 3 are identical to CIP:

- 1. Pre-rinse**
Flushing with water to mechanically remove product residues
- 2. Clean**
Applying a detergent to remove remaining visible product residues
- 3. Intermediate rinse**
Rinse with clean water to remove all traces of detergents
- 4. Disinfection**
Apply an appropriate disinfectant targeting one or more or all microorganisms
- 5. Final rinse**
Rinse with cleaned water to remove all traces of the disinfectant

4.4 Steam sterilisation

Steaming has the advantage that it does flushing, cleaning and sterilisation in one operation. However the heat from the steam will cause sugary substances to caramelize and substances containing protein to coagulate and burn; see chapter 2.1. In this case you must disconnect any fixed steam supply in order to flush the valve with an appropriate fluid prior to the post-sampling steaming.

If steaming is the preferred procedure, but no steam is installed near the sampling point, an option is to use a portable steam generator. Keofitt supplies fittings for a Kärcher steam generator. The steaming process with a Keofitt sampling valve has been validated to obtain sterility after 1 minute of steaming at 121° C (1 bar(g)). Documentation is available at the Keofitt Online Service Center on www.keofitt.dk.

5. VALVE OPERATIONS

This chapter provides clear instructions on how to operate the sampling valve in different situations. Before sampling the valve must be cleaned followed by disinfection or sterilisation, depending on your requirements.

For the initial cleaning before a new batch please refer to chapter 4.1 Batch change cleaning.




IMPORTANT

- All illustrations show a sampling valve with Keofitt hose piece connections. All instructions also apply to valve versions with clamp connections; only make sure to use the corresponding fittings.
- All illustrations show a sampling valve with a turn knob. However the instructions also apply to pneumatic valves and valves with a handle.


5.1 Chemical CIP

The CIP takes place with the valve remaining in its closed position.

Perform the following steps:

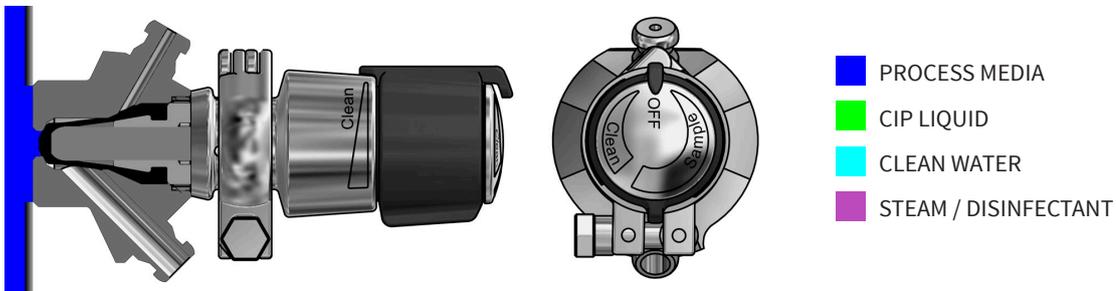

<p>1. Remove the plugs, if any, from the INLET and OUTLET ports. In the case of a valve with clamp connections there are no plugs supplied.</p>	
<p>2. Connect a water hose to the INLET hose piece.</p>	
<p>3. Connect a hose to the OUTLET hose piece and let the hose go to a drain.</p>	
<p>4. Flush with clean water by turning the knob towards "Clean".</p>	
<p>5. Remove the water hose and let the CIP liquid flow through the upper hose piece. If the CIP liquid must not go to drain, circulate it or collect it in a suitable container and dispose of correctly.</p>	
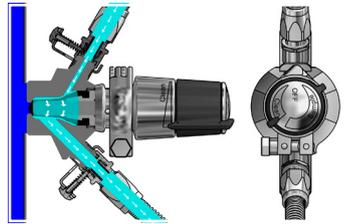
<p>6. Reconnect the water hose to the upper hose piece and rinse with clean water by turning the knob towards “Clean”.</p>	
--	---

If disinfection is not needed the valve is now ready for taking a sample. If disinfection is required proceed with the steps mentioned in the section “Chemical disinfection” below. Flush with clean water after sampling. If the process media is sticky, viscous or aggressive or for any other appropriate reason, do repeat the full CIP cycle after sampling.



WARNING

- Carefully follow the guidelines given for the chemicals involved
- Always remember to use safety goggles when steaming, CIPping, taking samples and all other operations of the sampling valve


5.2 Chemical disinfection



Immediately following the CIP, perform the disinfection, if required. The disinfection takes place with the valve remaining in its closed position.



There are 2 recommended ways to carry out the disinfection:

- A) by letting the disinfectant flow through the valve chamber
- B) by filling the valve chamber with the disinfectant (advantage: smaller volume of disinfectant needed and quicker and more reliable disinfection)


Steps to perform, when adopting A:




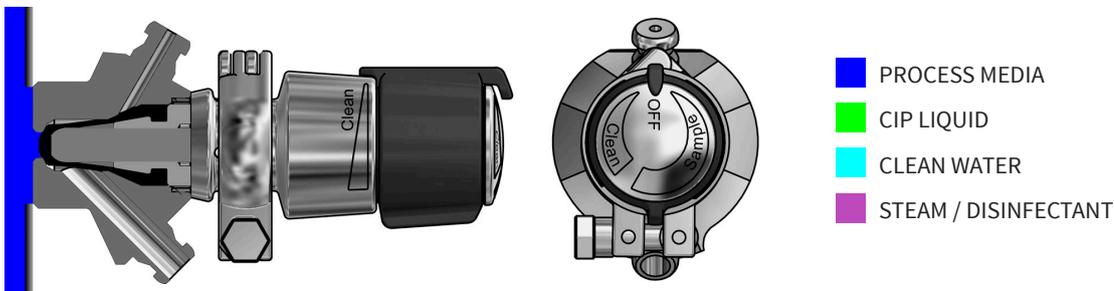


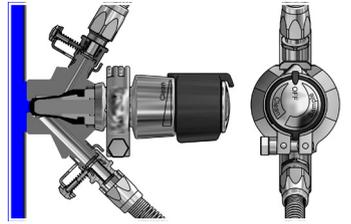
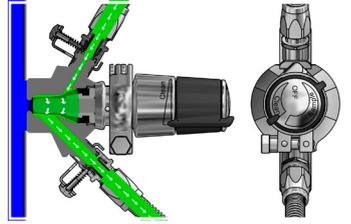
<p>1. Connect a hose with an empty bottle to the lower hose piece. This bottle or similar recipient is to collect the disinfectant (step 3) and the rinsing water (step 6).</p>	
<p>2. Fill a flexible bottle with the defined amount of disinfectant.</p>	
<p>3. Connect the flexible bottle via a hose to the INLET hose piece, turn the valve towards “Clean” and press the disinfectant slowly through the valve to wet the interior of the valve.</p>	
<p>4. Allow the disinfectant to act for the prescribed time.</p>	

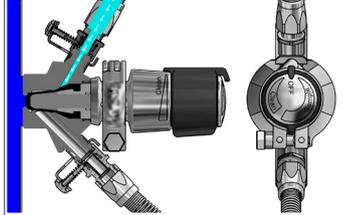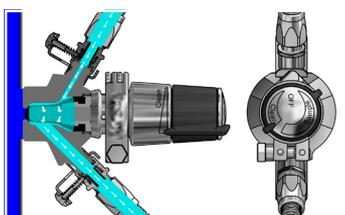5.	Disconnect the hose from the INLET hose piece and connect a flexible bottle with cleaned water to the INLET hose piece.	
6.	Set the valve in its “Clean” position and rinse through the INLET hose piece by squeezing the bottle, thus pressing the water through the valve chamber.	
7.	Leave the squeezed bottle connected to the INLET hose piece and set the valve in its “Off” position.	

Steps to perform, when adopting B:

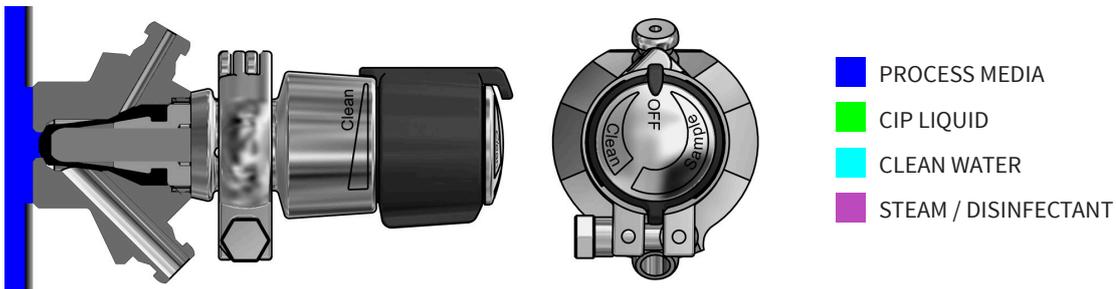

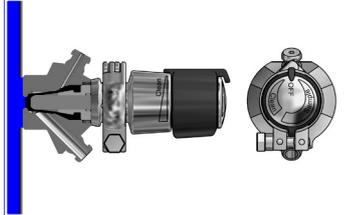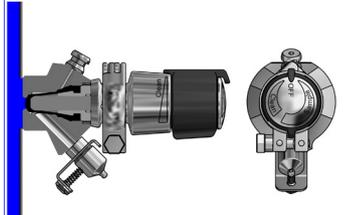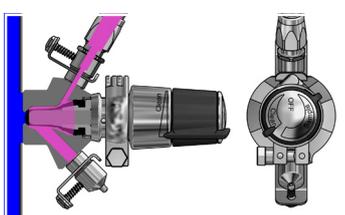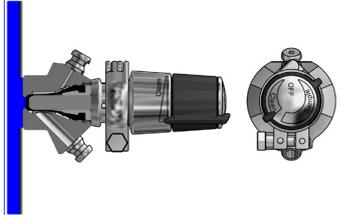1.	Disconnect any hoses from the INLET and OUTLET.	
2.	Plug the lower hose piece with a rubber plug (or a steel plug). In case of a valve with mini clamp connections the closing of the outlet may be obtained by using a tri clamp blind cap or by squeezing an attached piece of tubing or by any other appropriate means.	
3.	Set the valve in its “Clean” position and fill the valve chamber with the disinfectant through the INLET hose piece. Fill it very slowly to allow air from the valve chamber to escape.	
4.	Leave the valve in its “Clean” position and leave the disinfectant to act for the prescribed time.	
5.	Empty the valve chamber by unplugging the lower hose piece while holding a recipient under the valve allowing the disinfectant to flow out.	

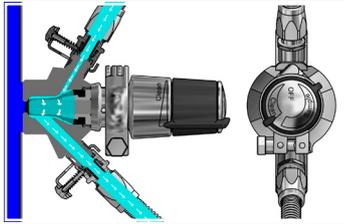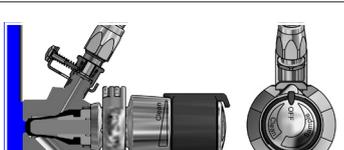6.	Connect a flexible bottle with cleaned water to the INLET hose piece, set the valve in its “Clean” position and rinse through the upper hose piece.	
7.	Set the valve in its “Off” position and either remove the squeezed bottle or leave in place as an additional protection against the environment.	
8.	Leave the OUTLET open or connect a hose ready to take a sample.	

The valve is now ready to take a sample. The sampling must be performed immediately after disinfection to avoid any contamination of the sample.

Flush with water after sampling. If the process media is sticky, viscous or aggressive or for any other appropriate reason, do repeat the full CIP cycle after sampling.




WARNING


- Carefully follow the guidelines given for the chemicals involved
- Always remember to use safety goggles when steaming, CIPping, taking samples and all other operations of the sampling valve




5.3 Steam sterilisation

Chemical CIP and chemical disinfection are not needed when using steam, as steam does it all. An exception from this is with sugary substances, which caramelize and with substances containing protein, which coagulate and burn; see chapter 2.1. In this case flushing with an appropriate fluid must precede post-sampling steaming.

Steam sterilisation takes place by moving the handle/turn knob from the “Off” to the “Clean” position. Perform the following steps:

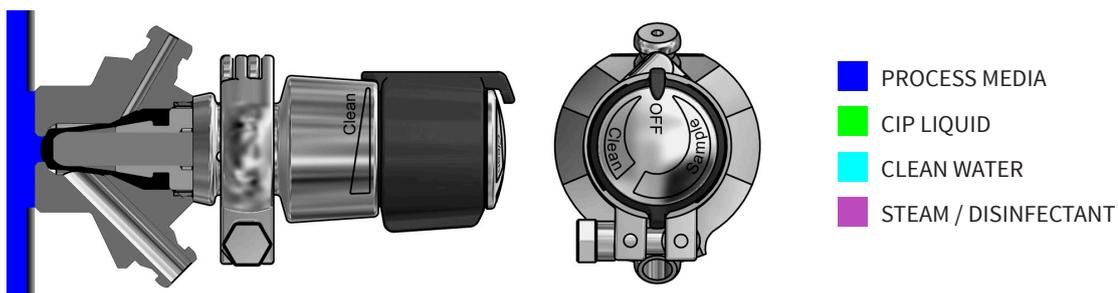

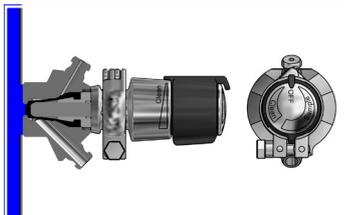1.	If a permanent steam connection is installed make sure the steam supply is opened. If no permanent steam make sure to connect a steam hose to the INLET.	
----	---	---

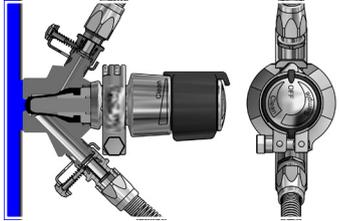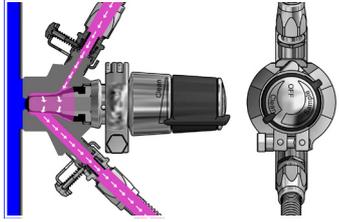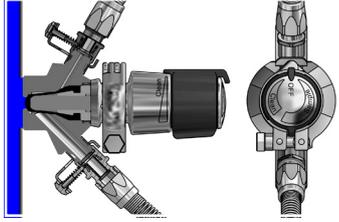2.	Connect a hose to the OUTLET hose piece and let it go to drain. NB: Do not connect a steam trap as it will impede the flow of steam and thus the flushing effect.	
3.	Open the steam supply and let it flow through the valve for sterilisation. Allow 1 minute at 121° C (1 bar(g)).	
4.	Set the valve to "Off". It is recommended to leave the steam hose in place.	

The valve is now ready to take a sample. The sampling must be performed immediately after steaming to avoid any contamination of the sample.



WARNING

- During sterilisation with steam the valve will become hot and care should thus be taken when operating the valve
- The valve is designed for use in working conditions of up to 6 bar(g) pressure and process medium temperatures defined by the membranes (see chapter 6 Technical data).
- For valve heads allowed under ATEX for Group IIGD, Category 2 (zone 1) both handle and top of valve heads N and Q must be cleaned before use
- Always remember to wear safety goggles when steaming, CIPping, taking samples or any other operations of the sampling valve



IMPORTANT

- Don't attach a steam trap to the hose from the valve steam outlet (lower hose piece) as it will impede the flow of steam and hence the flushing effect, and make the sterilisation dependant on temperature only, demanding a much longer sterilisation time
- If the steam capacity is low and/or the outlet hose from the valve is short and/or with a large diameter, the temperature will drop and condensation may occur in the valve chamber. In this case a counter pressure must be established using a pressure relief valve or a needle valve at the outlet
- Leave the steam hose in place to prevent contamination from the ambient during sampling. If removal of steam hose is required, fit a sterile rubber or stainless steel plug onto the upper hose piece


5.4 Sampling

Prepare a recipient for your sample.

For aseptic sampling use steam and a Keofitt Aseptic Sampling Bag (available in different sizes; please see datasheet on www.keofitt.dk). Leave the steam hose in place to prevent contamination from the ambient during sampling.

For all other sampling use a Keofitt Sterile Sampling Bag or a Spike Bag, which provides a closed flow path for your sample protecting it from the ambient. Alternatives are bottles with a screw cap, jars or any other available container.

Take the sample immediately after cleaning/disinfection/sterilisation performing the following steps:

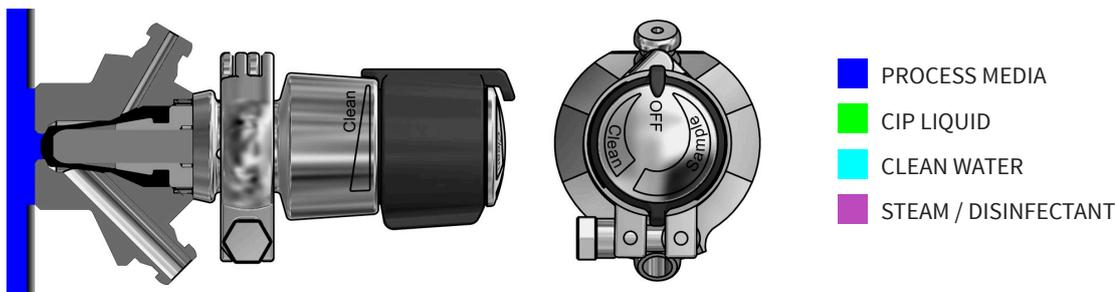

1.	Open the valve by slowly turning the turnknob or the handle clockwise towards “Sample”.	
2.	When required sample volume has been reached set the turnknob or handle back in its “Off” position to close the valve.	
3.	Perform a post-sample cleaning by flushing the valve with steam, detergent or water (whatever is required by the process medium). Connect a hose to the outlet port in order to lead the steam/detergent/water to the drain. Turn the turnknob (or the handle) anti-clockwise towards “Clean” and flush for a sufficient time to clean the valve chamber of any sample residues (usually 10 to 30 seconds). The procedure is the same for the type N head (pneumatic), only control the valve by means of the pneumatic cylinders.	

If the process media is sticky, viscous or aggressive or for any other appropriate reason, do repeat a full CIP cycle after sampling in case steam is not available and flushing with water prove insufficient.



WARNING

- When sampling at a high pressure and/or with a low viscosity process media it may flow rapidly into the sample recipient. Therefore open the valve slowly. Special care must be taken with pneumatically operated valves, as they open abruptly
- Always remember to wear safety goggles when steaming, CIPping, taking samples or any other operations of the sampling valve

6. TECHNICAL DATA

6.1 Material

Valve body:	AISI 316L (1.4404 or 1.4435 depending on version. Please refer to corresponding datasheet)
Valve head:	AISI 316L (1.4404)
Membrane:	Silicone (grey) EPDM (black) PTFE (white) FFKM (white)

6.2 Certificate

Valve body:	3.1 *) *A 6-digit code is marked on the valve body. This code refers to a 3.1 certificate which accompanies every consignment of valve bodies. The 3.1 certificate is available at the Keofitt Online Service Center on www.keofitt.dk . Click Certificates and then 3.1.
Membrane:	Silicone acc. to FDA, 3-A; EC1935, EC2023, USP, BfR XV EPDM acc. to FDA, 3-A, EC1935, EC2023, USP Class VI PTFE acc. to EU10, EU1935, EU2023, FDA, USP Class VI FFKM acc. to FDA, USP Class IV, EC1935, EC2023 For more details please see the individual certificates.

6.3 Pressure (max.)

Process pressure:	10 bar(g) / 145 psi(g)
CIP/SIP:	6 bar(g) / 87 psi(g)
Rubber plug:	3 bar(g) / 44 psi(g)
Steel plug:	15 bar(g) / 218 psi(g)

6.4 Temperature

Steam:	Sterilisation using dry, saturated steam at 121 C / 250 F and 1 bar(g). Dry, saturated steam at temperatures up to 134 C / 272 F and 2 bar(g) is possible, but might reduce the service life of the membrane.
Process medium:	The acceptable operating temperature range for the process medium depends on the choice of membrane as follows: <ul style="list-style-type: none">• Silicone: -60 C to 200 C• EPDM: -40 C to 140 C• PTFE: -200 C to 200 C• FFKM: -20 C to 270 C
Ambient:	The range of acceptable ambient temperatures is limited by the polymer turn knob and the pneumatic cylinder to -40 C to 80 C.

6.5 Surface finish

Internal: Electropolished
Ra \leq 0.5 μ m / 20 μ inch
Ra(mean) = 0.2 μ m / 8 μ inch
Ra(std.deviation) = 0.08 μ m / 3 μ inch
Valves with internal electropolishing are identified by an E preceding the serial number e.g. E12345678

External: Electropolished
The surface roughness is measured for each valve at 3 critical places (the valve body process surface, the valve chamber and the outlet port).
A serial number identifies each valve body. A specific surface roughness certificate is supplied with every valve. A general surface finish certificate copy is available on www.keofitt.dk

6.6 Viscosity:

Viscosity range: 0-1000cP, with particles up to 3mm in diameter.
Higher viscosity liquids may be sampled, only will the sampling take longer.


6.7 Flow

The graphs below illustrate (for water at 20°C/68°F) the following:

- Pressure drop across valve as a function of the flow for different positions of the turn knob
- Pressure drop for flow between the INLET and the OUTLET ports

Based on the tank pressure and the requested sample flow the graphs may be used to get an indication of to which degree the valve must be opened.

SESAME pressure drop

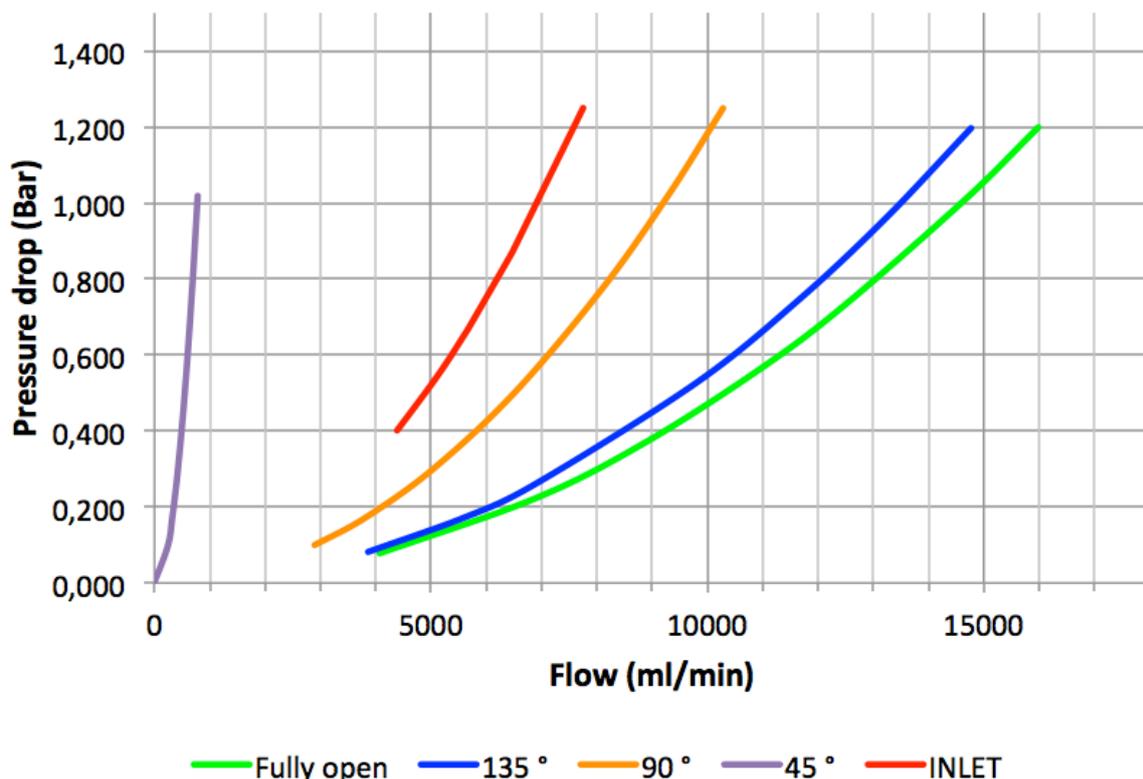

The generally accepted sampling time is around 10 sec. for small samples and around 30 sec. for larger samples. As usual sample sizes are between 100 ml and 1000 ml the needed flow lies from 600 to 2000 ml/min.

As the pressure on the sample side usually is 0 bar(g) the pressure drop across the valve equals the process pressure (tank pressure or line pressure).

The volume flow through a valve is given by: $k_v = Q \sqrt{\frac{\rho}{1000 \times \Delta p}}$

Symbol	Unit	Description
k_v	m ³ /h	Flow in m ³ /h through a valve at a pressure drop of 1 bar as defined in VDE/VDI norm 2173.
Q	m ³ /h	Volume flow through the valve
ρ	kg/dm ³	Density of the fluid. For Water it is 1.
Δp	bar	Pressure drop across valve. As the gauge pressure at the valve outlet usually is 0 bar(g) the pressure drop is often equal to the gauge pressure at the input (the process side)

7. VALVE BODIES

KEOFITT SESAME VALVE - BODIES

WELDING BODIES		CONNECTION BODIES				CONNECTION BODIES			
		Tank Welding	Pipe Welding	Varivent Ø50	Varivent Ø68	Mini Clamp	Clamp 1"	Clamp 2"	Thread
Hose Piece	 890001	 890011	 890008	 890009	 890036	 890021	 890003	 890031	 890040
Mini Tri-Clamp	 890006	 890010	<i>On request</i>	<i>On request</i>	 890039	 890022 <i>On request</i>	 890005 <i>On request</i>	<i>On request</i>	<i>On request</i>
Thread M16x1,5	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>
Welding Ends	 890007	<i>On request</i>	<i>On request</i>	<i>On request</i>	<i>On request</i>				

For further product information - material, dimensions etc. - please refer to the specific datasheet at www.keofitt.dk

8. VALVE HEADS

KEOFITT SESAME VALVE - HEADS

KEOFITT SESAME VALVE - HEADS		PTFE		FFKM		EPDM		Silicone	
Type H Turn knob 0-10bar		890041		890041E		890041F		895541	
Type Q Lever handle 0-10bar		890043		890043E		890043F		895543	
Type N Pneumatic 0-6bar		890044		890044E		890044F		895544	

For further product information - material, dimensions etc. - please refer to the specific datasheet at www.keofitt.dk

9. PARTS & ACCESSORIES

KEOFITT SESAME - PARTS & ACCESSORIES

SESAME PARTS & ACCESSORIES					
O-Rings	Membranes	For hose piece	For mini tri-clamp	For valve heads	Misc.
 400208 O-RING 68 FDA	 890051 SILICONE SESAME	 900013 MINICLAMP SPIKE	 900013 MINICLAMP SPIKE	 600170 Q HANDLE /TYPE N	 890063 SINGLE CHAIN
 400308 EPDM 42X3 FDA	 890052 EPDM SESAME	 800058 COIL W9	 300021 CLAMP/PTFE 10/8	 880255 TOOL REFLEX PTFE	 890064 DOUBLE ST. ST. CHAIN
 800630 10.3X2.4 EPDM	 890055 PTFE SESAME	 800061 QC W9 PLUG	 550002 PTFE W/QC 0.5M	 890170 Q HANDLE /TYPE Q	 900075 CLAMP 1/2"
 800630E 10.3X2.4 EPDM	 890053 FFKM SESAME	 800070 QC W9 WL	 550003 PTFE W/QC 1.0M	 900086 CLAMP 1"	
 880830 20.35X1.78 EPDM		 800071 QC W9 PTFE	 550004 PTFE W/TC 0.5M	 900189 CLAMP DN 10-20	
 900087 GASKET 1/2"		 800082 QC W9 HOSE ID 7	 550005 PTFE W/TC 1.0M		
 900091 GASKET 1"		 800083 QC W9 TC	 550002.2 PTFE W/QC/TC 0.5M		
 900092 GASKET 2"		 800086 QC W9 M4 HP	 550003.2 PTFE W/QC/TC 1M		
		 550057 ADAPTER	 900096 ADAPTER W9/TC		
		 600062 RUBBER CAP	 800014 MINIC / 1" CLAMP		
		 900045 SYRINGE ADAPTER W9			

For further product information - material, dimensions etc. - please refer to the specific datasheet at www.keofitt.dk

10.MOUNTING INSTRUCTIONS

10.1 Location

The valve should preferably be located with its centre line in a horizontal position and with the two hose pieces in a vertical position with the sample port “OUTLET DOWN” pointing downwards and the inlet port “INLET UP” pointing upwards.


Unlike the usual sampling valve design, like W9 and M4, the SESAME valve may be oriented in many other directions, remaining drainable and fully functional.

This is obtained by the dual valve function that keeps the CIP port closed in neutral position and during sampling.



IMPORTANT!

- The tank-side of the valve body must be positioned flush with the inside of the tank or the pipe in order to avoid any dead space.

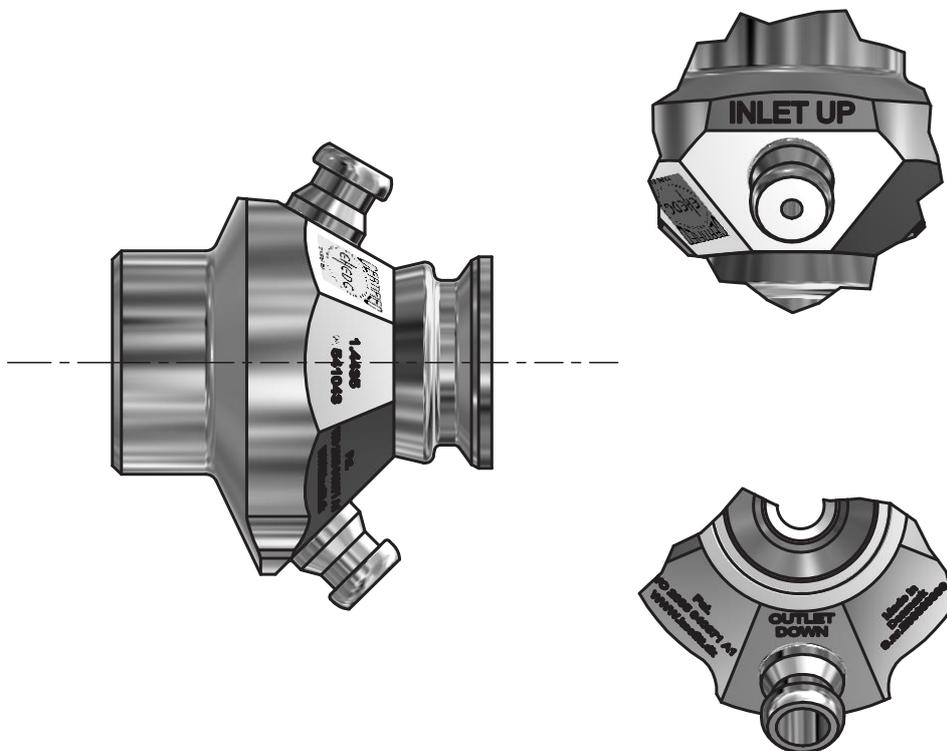

10.2 Before welding

Remember to disassemble the valve body and head. The valve body and head must be separated during welding. All plugs and other attachments must be removed from the valve body, as otherwise heat from the welding process will damage them.

11. WELDING INSTRUCTIONS

Valves for welding are available in two types: T (tank) and P (pipe).

1. For type T (tank) it is necessary to drill a hole $\varnothing 38$ mm into the tank wall, and then fit the valve into this hole flush with the inside of the tank. Welding should be carried out as a penetration welding.

Material thickness less than 4 mm: Weld from inside. Material thickness greater than 4 mm: Weld from both outside and inside.

Since type T has a solid end piece, the valve will not be damaged by penetration welding. However, the use of purge gas in the form of either Argon or Formier gas is recommended in order to give the best result.

2. For type P (pipe) penetration welding must be carried out from outside. The valve is machined with a recess-like shoulder on the outside of the end piece which gives approximately the same material thickness (1.5mm material thickness) as in the pipe wall. This machined shoulder can be modified according to the customer's wishes.




IMPORTANT!

- When grinding/polishing the internal weld, the valve seat must not be touched.

11.1 Welding method

The welding result will be best if the following method is used:

A collar is made on the pipe section so that the valve has a flat contact face. This flaring must look like a T-piece, as shown in the example below.

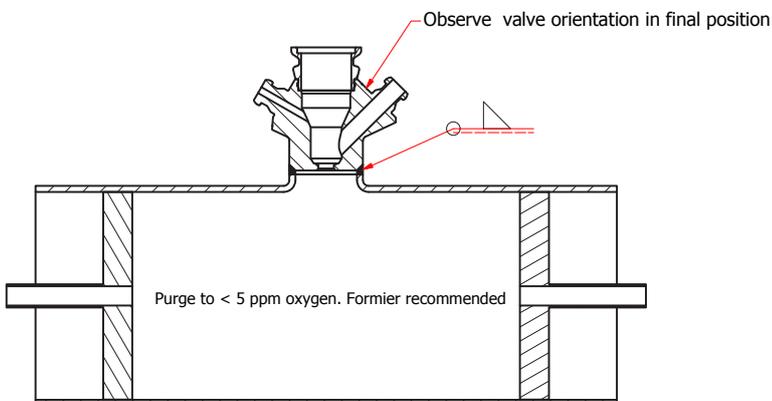

- The pipe section and the valve's hose pieces are sealed with sponge rubber or similar.
- Purge gas such as Argon or Formier gas is fed through the valve body into the pipe section and the system is now filled with 6 times the estimated volume of the pipe section. All O_2 is thus expelled from the system and welding can commence.
- Welding must take place only with the purge gas continually flowing in the system.
- The gas remains in the system until the item is lukewarm, after which the set-up can be dismantled.


11.2 Guideline welding values

W9™ valve welded onto a 2 mm 3" dairy pipe: 50-60 Amp.


It should be noted that Keofitt can supply all P type valves welded onto a pipe section according to customer specifications. Flaring is thus avoided and only a girth weld is required.

12. BLOCK DIAGRAMS


12.1 Keofitt valve type T (tank)

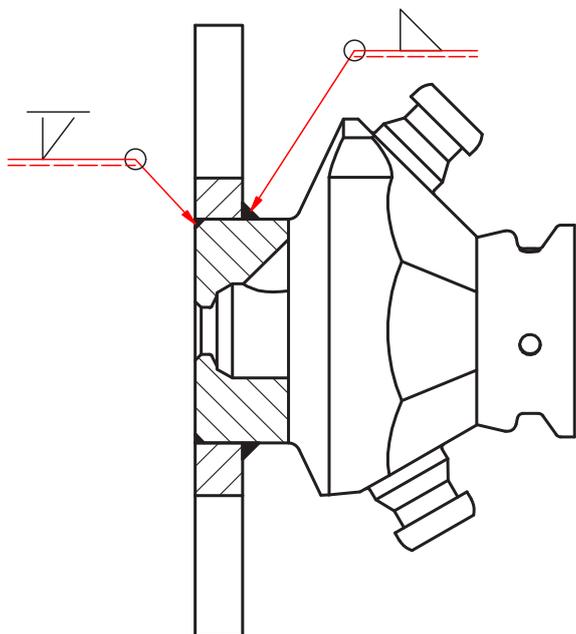

12.2 Keofitt valve type P (pipe)

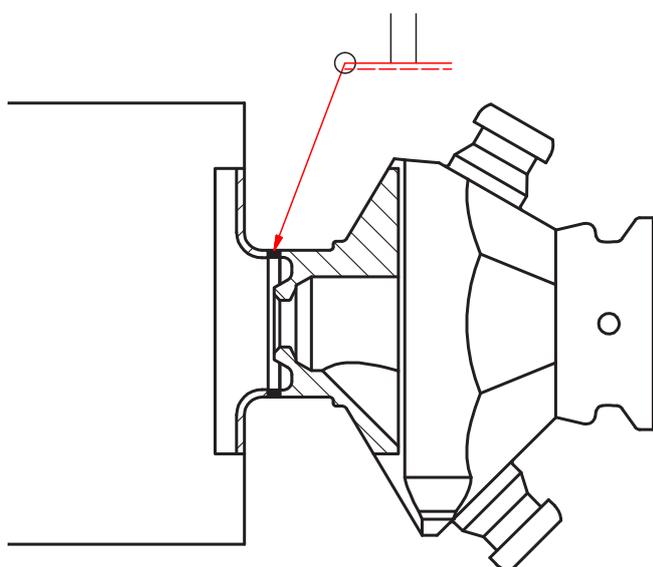


12.3 Keofitt valve type clamp connection

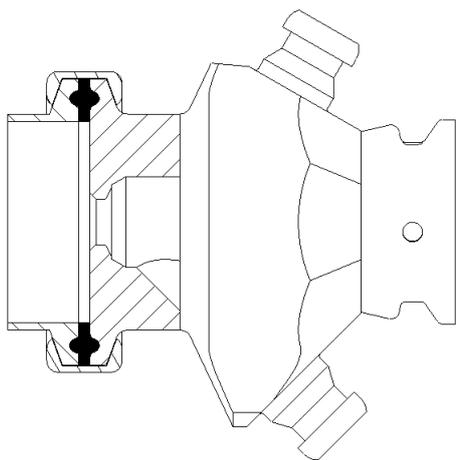

In order to minimise dead space the length of the connecting piece must be smaller than the internal diameter of the connecting piece ($A < B$).

12.4 Keofitt valve type Varivent®

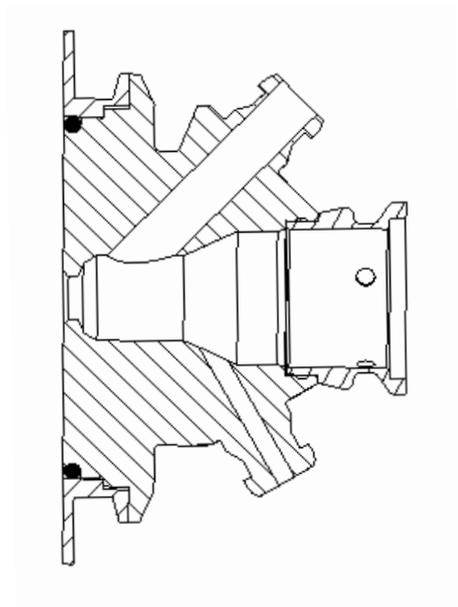


13. MAINTENANCE

13.1 Maintenance


The EPDM and Silicon membranes should be replaced every other month. PTFE and FFKM membranes should be replaced every 12 months. In the event of intensive sterilisation and cleaning it may be necessary to replace it more frequently. The appropriate replacement frequency should be determined by the user by starting with short intervals and continuously extend the time in use until one reaches the limit of the membrane's durability. Based on the desired safety margin the user then decides on the replacement interval to adapt.

In each individual case a standard operating procedure including maintenance intervals should be endorsed based on experience. For disassembly of valve body and valve head, see instructions in chapter 13.3.

13.2 Spare parts list

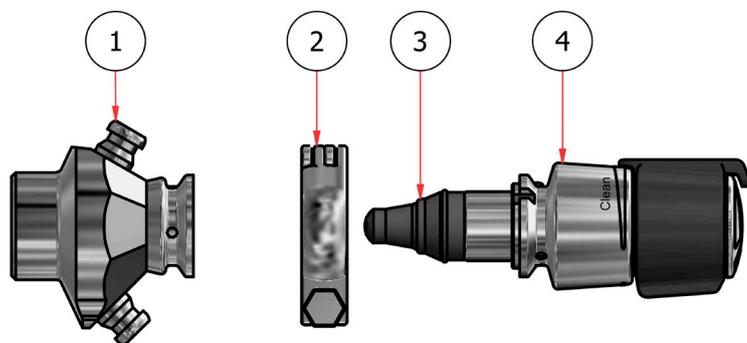


Turn to Clean before disassembly or assembly

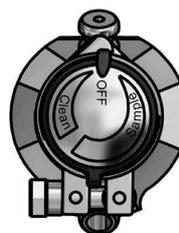

1. Valve body (several variants available)
2. Clamp
3. Membrane (several variants available)
4. Valve head (several variants available)

13.3 Disassembly and assembly of valve body and head

For inspection of the membrane or for the purpose of cleaning it is necessary to disassemble the valve (separate the valve head from the valve body).

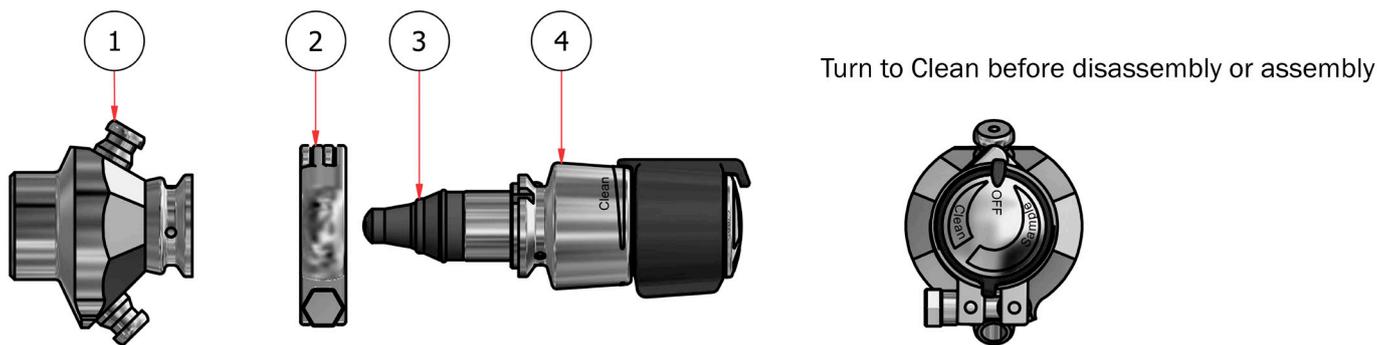

In order to disassemble and assemble the valve body and valve head please perform the following operations:

Disassembly (type H, Q and N):

1. Make sure any steam or detergent/disinfectant supply is shut off
2. Make sure the valve is in its “Clean” position
3. Loosen and remove the clamp
4. Pull the head out (avoid turning it)

Assembly (Type H, Q and N):

1. Set the valve in its “Clean” position
2. Fit the valve head on to the valve body (any orientation is possible, but usually with “Off” pointing at “INLET UP” on the valve body.
3. Mount the clamp and tighten it using a small spanner (don’t apply excessive force, but make sure the flanges come in full mechanical contact).
4. Reestablish steam or detergent/disinfectant supply



WARNING!

- When replacing the membrane, set the valve head in the CLEAN position during disassembly and assembly. Omitting to do so may cause damage to the membrane.
- Don’t clean the valve head in an ultrasonic bath or by immersing it in a degreasing liquid, as it will impede the proper functioning of the screw action. When in doubt, contact your local Keofitt dealer.

13.4 Replacing a rubber membrane

To remove an old rubber membrane (silicone, EPDM or FFKM) from the valve head:

1. Detach the valve head from the valve body as described in chapter 13.3.
2. Set the valve head in its “Sample” position
3. Grab the membrane by its base and pull it out

To attach a new membrane to the valve head:

4. Set the valve head to “Sample” position.
5. Place the new membrane on valve head and press the new membrane against the steel shoulder in order to allow the membrane to lock into the groove.
6. Set the valve head in its “Clean” position.
7. If necessary push the tip of the membrane sideways until it sits perfectly co-axial with the valve head.
8. Insert the valve head into the valve body and mount the clamp as described in chapter 13.2.
9. Set the valve in its “OFF” position.

13.5 Instructions on replacing a PTFE membrane

To remove an old membrane from the valve head:

1. Detach the valve head from the valve body as described in chapter 13.3.
2. Set the valve head in its “Sample” position
3. Insert tool (point 1 and 2 on illustration below) for membrane, between the membrane and the steel shoulder.
4. Move/bend the tool down until the membrane detaches point 3 in illustration below.
5. Now the membrane pops out and may be removed.

To attach a new membrane to the valve head:

6. Set the valve head to “OFF” position.
7. Place the new membrane on valve head and press the new membrane against the steel shoulder in order to allow the membrane to lock into the groove.
8. For PTFE membranes: Press the tip of the membrane hard against a table or similar until it clicks indicating the membrane locking into the valve stem.

For rubber membranes:

If necessary push the tip of the membrane sideways until it sits perfectly co-axial with the valve head.

9. Set the valve head in its “Clean” position.
10. Insert the valve head into the valve body and mount the clamp as described in chapter 13.2.
11. Set the valve in its “OFF” position.




IMPORTANT

- Once a PTFE membrane has been removed from the valve head the click system in the membrane might be damaged. Therefore the membrane could be unsafe for further use (risk of membrane not being pulled back when opening the valve) and it is recommended not to use the membrane again.
- Do not use hammer or other tool that might scratch the surface of the membrane.

Sesame membrane dismounting:


1. Position tool flat face towards valve head’s handle or turn knob.
2. Press tool with caution in between membrane and piston
3. Bend tool carefully to detach the membrane.

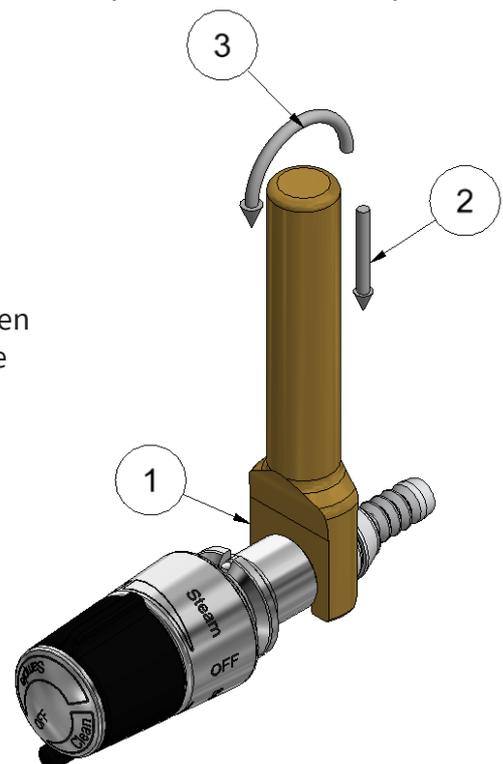

13.6 Cleaning valve head

In the rare case of a longitudinal crack in the membrane causing product to seep out of the weep holes, it is necessary to dismantle the valve head to clean it as described below.

Firstly, detach the Valve Head from the Valve Body as explained in chapter 13.3.

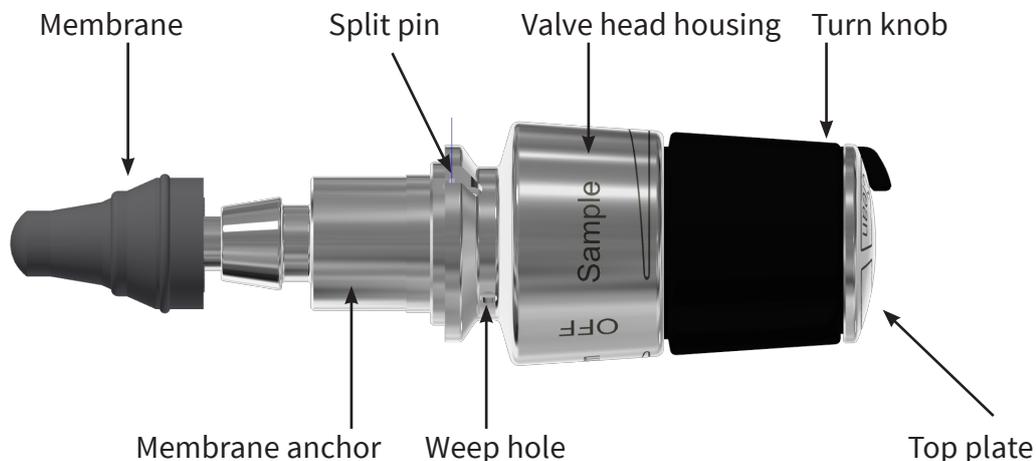

Then follow this procedure to take the valve head apart to clean it:

1. Remove the broken Membrane
2. Fix the Valve Head Housing firmly into a vice (use soft jaws due to the conical shape)
3. Apply compression force on the Membrane Anchor until you may observe the Split Pin lift from its contact surface
4. While maintaining the compression force press the Split Pin out (it is advised this job to be done by two persons)
5. Release the compression force slowly until the Membrane Anchor comes loose together with a spring behind it
6. Clean and rinse all detached parts
7. Clean and rinse the Valve Head Housing and its remaining assembly
8. Allow parts to dry completely

Perform assembly by following these steps:

1. Align Turn Knob with the OFF marks on both Top Plate and Valve Head Housing
2. Mount spring and Membrane Anchor (in that order)
3. Apply force on the Membrane Anchor to compress the spring until the pin holes are aligned
4. Mount Split Pin and make sure it rests symmetrically on both sides of the Valve Head Housing
5. Mount a new membrane



WARNING

- Don't clean the valve head in an ultrasonic bath or by immersing it in a degreasing liquid, as it will impede the proper functioning of the screw action. When in doubt, contact your local Keofitt dealer.

14. FAILURE MODES

If the membrane is not replaced with a new one at regular intervals (depending on the application), it may eventually break, usually around the tip and more seldom along the side or at the integrated o-ring.

14.1 Broken membrane tip:

This failure usually causes product to leak from the process side and more or less product will flow out through the lower port, also when the valve is in closed position. As such the valve port acts as a leakage hole (weep hole).

14.2 Broken membrane side:

A longitudinal slit in the membrane is a rare incident and will only occur if the membrane has been kept in operation far beyond its expected service life.

Should it happen, product will during sampling enter the cavity between the internal surface of the membrane and the rod operating the membrane. As there is no significant pressure in the valve chamber during sampling product will only flow slowly through the slit and will eventually flow through the weep hole shown in the illustration in chapter 13.6. However, this is likely to take many rounds of samplings due to the short sampling time and the very low pressure on the external side of the membrane.

14.3 Broken integrated o-ring:

The even more rare incident of a broken integrated o-ring will cause leakage along the inside wall of the part of the valve body, on to which the valve head is clamped.

The integrated o-ring seals between the steam/CIP compartment of the valve and the exterior. In case of a malfunction steam or CIP liquid will flow through a weep hole in the valve body, just below the clamp section.

14.4 Cleaning the valve after a failure:

In case of any of the above failures the valve needs to be completely taken apart and cleaned properly using a non-abrasive cleaning agent by performing the following sequence of operations (the choice of cleaning agent is for the user to decide as it depends on the product in the process line):

1. Detach the valve head from the valve body as explained in chapter 13.3
2. Disassemble the valve head as explained in chapter 13.6
3. Clean all individual components from the disassembled valve head
4. Clean the valve body
5. Assemble the valve head as explained in chapter 13.6 and fit a new membrane (see chapter 13.4 or 13.5)
6. Fit the valve head to the valve body as explained in chapter 13.3

15. MEMBRANES

15.1 Silicone membrane - art. no. 890051



10 PACK MEMBRANE SILICONE SESAME

ART. NO. 890051

GENERAL



KEOFITT has the widest selection of spare parts and accessories to complete your sampling system




Compatible with all KEOFIT Sesame valve heads for silicone & EPDM membrane



The patented membrane design is an essential part of the hygienic design of the KEOFIT sampling valves



It allows for optimal exposure to CIP and SIP media while also integrating the capacity to remove the membrane from the valve head without the use of tools

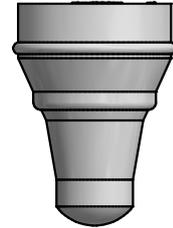

FEATURES



Compatible with all KEOFIT Sesame valve heads for silicone & EPDM membrane

CERTIFICATION*


· EU EC 1935/2004 · EU EC 2023/2006 · DK No.822 06/2013 · FDA CFR 21 §177.2600 · USP Class VI · REACH
· RoHS · ADI Free · Keofitt DoC

TECHNICAL DATA

Type:	Silicone (QBF-65 - grey)
Hardness (Shore A):	70 ±3
Tensile strength (MPa):	Min. 8,5
Elongation at break (%):	550 ±80
Density (g/cm ³):	1,19 ±0,01
Range of temperature in dry atmospheric air (°C/°F):	-60°C - +200°C / -76°F- +392°F
Compression set, DIN 53517, 24h/175°C (%):	Max. 25
Wear resistance:	Character 1, 4 = best
Tear resistance:	Character 3, 4 = best
Resistance to weather and ozone:	Character 4, 4 = best
Resistance to hydrolysis (water and steam):	Character 2, 4 = best
Resistance to chemicals (acids/bases):	Character 2, 4 = best
Resistance to mineral oil and gas:	Character 1, 4 = best
Permeability (air and gasses):	Character 0, 4 = best
Net weight (kg/lbs):	0,006 kg /0,013 lbs

SERVICE TIME

Average service life of a silicone membrane is 2-3 months, but depends very much on operating conditions and choice of cleaning method and sterilization - actual life expectancy must be experimentally determined by the user.

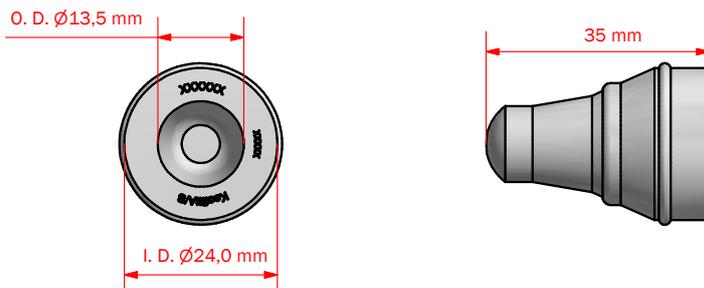

*For further information please visit keofitt.dk

Last updated 21-09-2017

15.2 EPDM membrane - art. no. 890052



10 PACK MEMBRANE EPDM SESAME

ART. NO. 890052

GENERAL



KEOFITT has the widest selection of spare parts and accessories to complete your sampling system



Compatible with all KEOFIT Sesame valve heads for silicone & EPDM membrane



The patented membrane design is an essential part of the hygienic design of the KEOFIT sampling valves



It allows for optimal exposure to CIP and SIP media while also integrating the capacity to remove the membrane from the valve head without the use of tools



FEATURES



Compatible with all KEOFIT Sesame valve heads for silicone & EPDM membrane

CERTIFICATION*


· EU EC 1935/2004 · EU EC 2023/2006 · DK No.822 06/2013 · FDA CFR 21 §177.2600 · USP Class VI · REACH
· RoHS · ADI Free · Keofitt DoC

TECHNICAL DATA

Type:	EPDM (EPL-60 - black)
Hardness (Shore A):	61 ±3
Tensile strength (MPa):	Min. 16
Elongation at break (%):	400 ±50
Density (g/cm ³):	1,12 ±0,01
Range of temperature in dry atmospheric air (°C/°F):	-40°C - +140°C / -40°F - +284°
Compression set, DIN 53517, 24h/175°C (%):	Max. 16
Wear resistance:	Character 3, 4 = best
Tear resistance:	Character 3, 4 = best
Resistance to weather and ozone:	Character 4, 4 = best
Resistance to hydrolysis (water and steam):	Character 4, 4 = best
Resistance to chemicals (acids/bases):	Character 3-4, 4 = best
Resistance to mineral oil and gas:	Character 0-1, 4 = best
Permeability (air and gasses):	Character 1-2, 4 = best
Net weight (kg/lbs):	0,005 kg /0,012 lbs

SERVICE TIME

Average service life of a EPDM membrane is 2-3 months, but depends very much on operating conditions and choice of cleaning method and sterilization - actual life expectancy must be experimentally determined by the user.

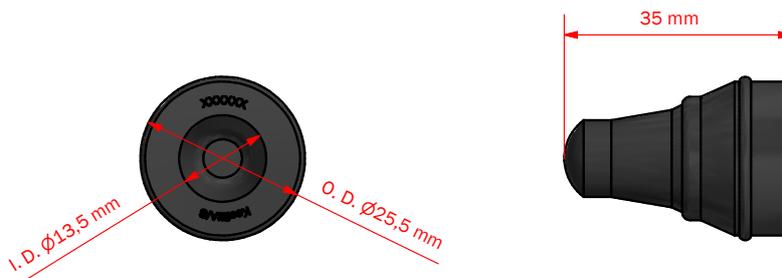

*For further information please visit keofitt.dk

Last updated 21-09-2017

15.3 PTFE membrane - art. no. 890055



MEMBRANE PTFE SESAME

ART. NO. 890055

GENERAL



KEOFITT has the widest selection of spare parts and accessories to complete your sampling system



Compatible with all KEOFIT Sesame valve heads for PTFE membrane



The patented membrane design is an essential part of the hygienic design of the KEOFIT sampling valves



It allows for optimal exposure to CIP and SIP media while also integrating the capacity to remove the membrane from the valve head without the use of tools



FEATURES



Compatible with all KEOFIT Sesame valve heads for PTFE membrane

CERTIFICATION*



· EU EC 1935/2004 · EU EC 2023/2006 · EU EC 10/2011 · DK No.822 06/2013 · FDA CFR 21 §177.1550 · USP Class VI
· REACH · RoHS · ADI Free · Keofitt DoC

TECHNICAL DATA

Type:	PTFE (TFM 1705 - white)
Tensile strength (psi):	4800
Elongation at break (%):	450
Density (g/cc):	2,16
Service Temperature Range (°C/°F):	-200 - +260 / -328 - +500
Deformation under Load (%):	
2175 psi - 24 h	9
2175 psi - 100 h	10
2175 psi - permanent	4,5
Flammability, UL94	V-0
Melt point, initial (°C):	342 ±10
Net weight (kg/lbs):	0,006 kg /0,014 lbs

SERVICE TIME

Average service life of a PTFE membrane is 12 months, but depends very much on operating conditions and choice of cleaning method and sterilization - actual life expectancy must be experimentally determined by the user.

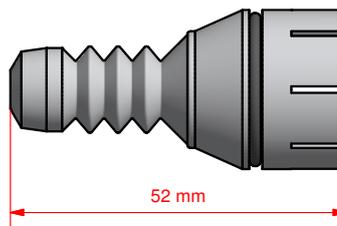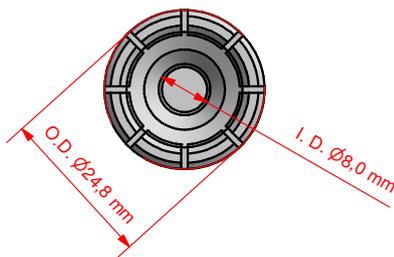

*For further information please visit keofitt.dk

Last updated 21-09-2017

Keofitt reserves the right to change technical data without notice!

For complete set of updated data sheets and manuals for Keofitt products please refer to our web page www.keofitt.dk



KEOFITT A/S
Kullinggade 31
DK-5700 Svendborg
Denmark

Phone +45 6316 7080
Fax +45 6316 7081

info@keofitt.dk
www.keofitt.dk



DON'T GAMBLE WITH YOUR SAMPLE™